

## IGT COBALT 4.1 AVP BRAIN BOX

4+ BRAIN BOX IMAGE



4.1 BRAIN BOX IMAGE



### Key differences:

1. The secure USB port is no longer under the brain box door. The security dongle now must be placed in one of the USB ports in the middle section of the brain box, as shown in the picture above right.
2. The CFINIT dongle must now be placed in one of the USB ports at the top of the brain box, as shown in the picture above right. It will no longer function if placed in the cabinet control board.
3. You must use CFINIT version 117.2.5 in the 4.1 brain box. The older version will not work. Please contact Amber if you need to exchange older CFINITs for the new ones.
4. Only the RAM is interchangeable between brain boxes. All other internal components are unique to each box.
5. The green tipped audio connector has been replaced with a green USB connector to the audio board.
6. The technician button to access the back office menu is more visible with a red cap.
7. The current versions of the software sets are interchangeable between brain boxes, but the Intralot version number will be different depending on which box you are using. Please consult the current version number guide.